TRENTON Technology Inc.
2350 Centennial Drive • Gainesville, Georgia 30504
Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

Technical Information – Jumpers and Connectors
BPG6615 (6615) Graphics-Class PCI Express Backplane

Block Diagram

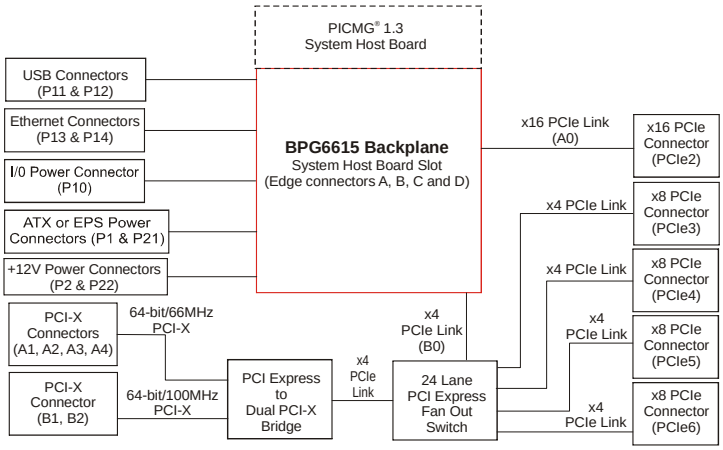

Layout Diagram – 6615

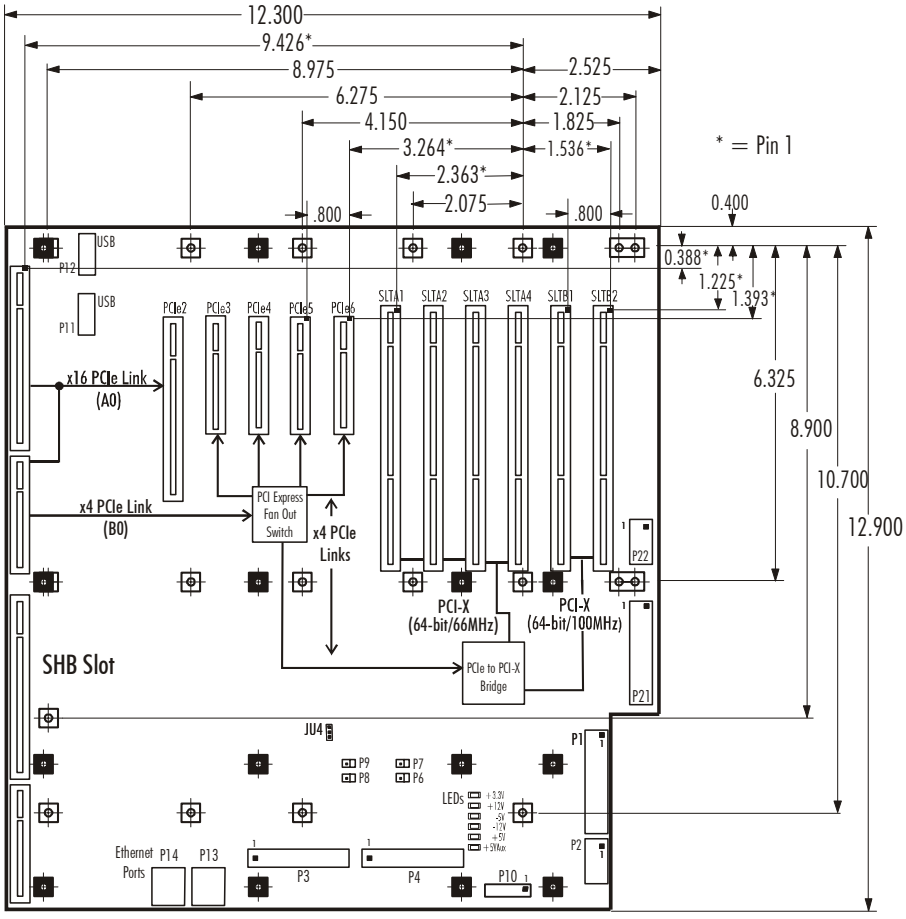

Trenton Hole Pattern

PICMG 1.3 Hole Pattern

Notes:

**Optional USB and Ethernet connectivity provided by PICMG 1.3 SHB. Not all SHBs support this capability.

Connector spacing: 0.800”

To find the center of a PCI-X/PCI option card connector to the left of the reference dimension hole, add 0.150” to the pin 1 location dimension. To find the center of a PCI Express option card connector and the SHB slot add 0.049” to the pin 1 location dimension.

Nominal PCB thickness: .080”

Mounting holes: .156” diameter

Connectors are populated based on model.

Some holes are common to both hole patterns

All dimensions are inches.

TRENTON Technology Inc.
2350 Centennial Drive • Gainesville, Georgia 30504
Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

BPG6615 (6615) Configuration Jumper

The setup of the configuration jumper on the backplane is described below. * indicates the default value of the jumper.

NOTE: For the two-position jumper (3-post), "TOP" and "BOTTOM" refer to positioning when the backplane is viewed with the slots at the top end of the backplane.

Jumper	Description
JU4	**+5V Auxiliary Voltage** Install on the TOP if +5V auxiliary voltage is provided by the standard +5V supply. This option is used for systems which do not have either an ATX or EPS standard power input. This mode provides the necessary +5V for the SHB's +5VAUX signal lines. Sleep mode recovery is not supported using non-ATX/EPS power supplies. Install on the BOTTOM if +5V auxiliary voltage is provided by a separate +5VAUX signal input pin. This enables the necessary SHB power signaling and allows recovery from sleep mode. This option is used for ATX or EPS standard power supplies. *

BPG6615 (6615-010) Connectors

NOTE: Pin 1 on the connectors is indicated by the square pad on the PCB.

P1 - ATX/EPS Power Connector

24 pin dual row header, Molex #44206-0007

Pin	Signal	Pin	Signal
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Gnd	15	Gnd
4	+5V	16	PSON#
5	Gnd	17	Gnd
6	+5V	18	Gnd
7	Gnd	19	Gnd
8	PWRGD	20	-5V
9	+5VAUX	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Gnd

P2 - +12V Power Connector

8 pin dual row header, Molex #44206-0005

Pin	Signal	Pin	Signal
1	Gnd	5	+12V
2	Gnd	6	+12V
3	Gnd	7	+12V
4	Gnd	8	+12V

TRENTON Technology Inc.
2350 Centennial Drive • Gainesville, Georgia 30504
Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

BPG6615 (6615-010) Connectors (continued)

P3 - Terminal Block Connector

10 position terminal block, Phoenix Contract Inc., 19-35-24-2
20 Amps per circuit

Pin	Signal
1	+3.3V
2	+3.3V
3	+3.3V
4	+3.3V
5	Gnd
6	Gnd
7	Gnd
8	Gnd
9	Gnd
10	Gnd

P4 - Terminal Block Connector

10 position terminal block, Phoenix Contract Inc., 19-35-24-2
20 Amps per circuit

Pin	Signal
1	+5V
2	+5V
3	Gnd
4	Gnd
5	Gnd
6	Gnd
7	Gnd
8	+12V
9	+12V
10	+12V

P6 - Power-On Connector

2 pin single row header, Amp #640456-2

Pin	Signal
1	PSON#
2	Gnd

P7 - Power Button Connector

2 pin single row header, Amp #640456-2

Pin	Signal
1	PWRBT#
2	Gnd

P8 - Reset Connector

2 pin single row header, Amp #640456-2

Pin	Signal
1	SHB_RST#
2	Gnd

P9 - Power Good Connector

2 pin single row header, Amp #640456-2

Pin	Signal
1	PWRGD
2	Gnd

TRENTON Technology Inc.
2350 Centennial Drive • Gainesville, Georgia 30504
Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

BPG6615 (6615-010) Connectors (continued)

P10 - I/O Power Connector

20 pin dual row header, Molex #87831-2020

Pin	Signal	Pin	Signal
1	Gnd	2	+12V
3	IPMB_DA	4	Gnd
5	IPMB_CL	6	+5V
7	SMDAT	8	+5VAUX
9	SMCLK	10	+3.3V
11	PWRBT#	12	PSON#
13	Gnd	14	SHB_RST#
15	PWRGD	16	+5VAUX_IN
17	Gnd	18	+5VAUX_IN
19	Gnd	20	-12V

P11 - Universal Serial Bus (USB) Connector

8 pin dual row header, Molex #702-46-0801
(+5V fused with self-resetting fuses)

Pin	Signal	Pin	Signal
1	+5V-USB0	2	+5V-USB1
3	USB0-	4	USB1-
5	USB0+	6	USB1+
7	Gnd-USB0	8	Gnd-USB1

P12 - Universal Serial Bus (USB) Connector

8 pin dual row header, Molex #702-46-0801
(+5V fused with self-resetting fuses)

Pin	Signal	Pin	Signal
1	+5V-USB2	2	+5V-USB3
3	USB2-	4	USB3-
5	USB2+	6	USB3+
7	Gnd-USB2	8	Gnd-USB3

P13 - 10/100/1000Base-T Ethernet Connector - LAN 0

8 pin shielded RJ-45 connector, Molex #85508-0001

Pin	Signal
1	TRP1+
2	TRP1-
3	TRP2+
4	TRP3+
5	TRP3-
6	TRP2-
7	TRP4+
8	TRP4-

TRENTON Technology Inc.
2350 Centennial Drive • Gainesville, Georgia 30504
Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

BPG6615 (6615-010) Connectors (continued)

P14 - 10/100/1000Base-T Ethernet Connector - LAN 1

8 pin shielded RJ-45 connector, Molex #85508-0001

Pin	Signal
1	TRP1+
2	TRP1-
3	TRP2+
4	TRP3+
5	TRP3-
6	TRP2-
7	TRP4+
8	TRP4-

P19 - System Management Bus Connector

2 pin single row header, Amp #640456-2

Pin	Signal
1	SMB Clock
2	SMB Data

P21 - EPS Power Connector

24 pin vertical dual row, Molex #44206-0007

Pin	Signal	Pin	Signal
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Gnd	15	Gnd
4	+5V	16	PSON#
5	Gnd	17	Gnd
6	+5V	18	Gnd
7	Gnd	19	Gnd
8	PWRGD	20	-5V
9	+5VAUX	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Gnd

P22 - +12V Power Connector

8 pin vertical dual row, Molex #44206-0005

Pin	Signal	Pin	Signal
1	Gnd	5	+12V
2	Gnd	6	+12V
3	Gnd	7	+12V
4	Gnd	8	+12V

TRENTON Technology Inc.
2350 Centennial Drive • Gainesville, Georgia 30504
Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

Trenton SHB Optional Backplane I/O Support For the BPG6615

TRENTON SHB	ETHERNET			USB							
	LAN 0	LAN 1	LAN 2	USB 0	USB 1	USB 2	USB 3	USB 4	USB 5	USB 6	USB 7
TQ9[1, 4]	-	-	X	-	-	-	-	X	X	X	X
T4L[1,2]	-	-	X	-	-	-	-	X	X	X	X
TML[1,2]	-	-	X	-	-	-	-	X	X	X	X
MCG-series[3]	-	-	X	-	-	-	-	X	X	X	X

[1] LAN2 is a 10/100BASE-T Ethernet interface when using the TQ9, T4L or TML
[2] Backplane routings of USB interfaces 4 & 5 are factory build options on the T4L and TML
[3] LAN2 is a 10/100/1000BASE-T Ethernet interface when using a MCG-series SHB
[4] USB interfaces 4, 5, 6 and 7 are logical USB interfaces 8, 9, 10 and 11 on the TQ9 system host board

Note: The letter X indicates an interface connection routed to SHB edge connector C for use on the backplane

Connector Configuration Illustrated For The BPG6615

MODEL#	MODEL NAME	DESCRIPTION
6615-010	BPG6615-RAV	ATX/EPS right-angle and vertical connectors with two high-current terminal blocks